"LIS_DEPARTMENT OF HOMELAND SECURITY FEDERAL EMERGENCY MANAGEMENT AGENCY National Flood Insurance Program

ELEVATION CERTIFICATE

IMPORTANT: Follow the instructions on pages 1-9.

OMB No. 1660-0008 Expiration Date: July 31, 2015


	SECTION A – PROPERTY INFORMATION	FOR INSURA	NCE COMPANY USE			
A1.	Building Owner's Name	Policy Number				
A2.	Building Street Address (including Apt., Unit, Suite, and/or Bldg. No.) or PO. Route and Box No.	Company NAIC				
	City ARGATE State	ZIP Code さと	402			
A3.	LOT S BLOCK SZZ					
A5. A6. A7.	Building Use (e.g., Residential, Non-Residential, Addition, Accessory, etc.) Latitude/Longitude: Lat. 39.32787° Long. 74.5/468° Horizontal Attach at least 2 photographs of the building if the Certificate is being used to obtain flood insurance. Building Diagram Number 7 For a building with a crawlspace or enclosure(s): A9. For a building with an attachment of the control of the certificate is being used to obtain flood insurance. A9. For a building with an attachment of the certificate is being used to obtain flood insurance.		e: ,			
	-, -, -, -, -, -, -, -, -, -, -, -, -, -	nt flood openi e adjacent gra ed openings in	ngs in the attached garage ade			
	SECTION B - FLOOD INSURANCE RATE MAP (FIRM) INFORMATI	DN				
CI	NFIP Community Name & Community Number TY OF MARCATE CITY 345304 Map/Panel Number B5. Suffix B6. FIRM Index Date B7. FIRM Panel Effective/ B8. Flood Zone(s) B9. Base	B3. State			
	6304 0001 C 10/18/83 A8		use base flood depth) 【 O・ O			
B10.	Indicate the source of the Base Flood Elevation (BFE) data or base flood depth entered in Item B9: ☐ FIS Profile ☐ FIRM ☐ Community Determined ☐ Other/Source:					
	B11. Indicate elevation datum used for BFE in Item B9: NGVD 1929 NAVD 1988 Other/Source: B12. Is the building located in a Coastal Barrier Resources System (CBRS) area or Otherwise Protected Area (OPA)? Yes No Designation Date:/ CBRS OPA					
	SECTION C - BUILDING ELEVATION INFORMATION (SURVEY REQUI	RED)	14-121			
C2.	Indicate elevation datum used for the elevations in items a) through h) below. NGVD 1929 NAVD 1988 Datum used for building elevations must be the same as that used for the BFE. a) Top of bottom floor (including basement, crawlspace, or enclosure floor) b) Top of the next higher floor c) Bottom of the lowest horizontal structural member (V Zones only) d) Attached garage (top of slab) e) Lowest elevation of machinery or equipment servicing the building (Describe type of equipment and location in Comments) f) Lowest adjacent (finished) grade next to building (LAG) g) Highest adjacent (finished) grade next to building (HAG) h) Lowest adjacent grade at lowest elevation of deck or stairs, including structural support	Other/Someasurement t meters	omice 2 2 2 1 4 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2			
	SECTION D – SURVEYOR, ENGINEER, OR ARCHITECT CERTIFICAT					
forma under Che	ertification is to be signed and sealed by a land surveyor, engineer, or architect authorized by law to certify elevation. I certify that the information on this Certificate represents my best efforts to interpret the data available. The stand that any false statement may be punishable by fine or imprisonment under 18 U.S. Code, Section 1001. The comments are provided on back of form. Were latitude and longitude in Section A provided by a licensed land surveyor?		5 33541			
Title PRO Addres	S CANTILLON BOULEVARD MAYS LANDING NJ 10833		PLACE SEAL HERE 12/24/2014			

ELEVATION CERTIFICATE, page 2 IMPORTANT: In these spaces, copy the corresponding information from Section A. FOR INSURANCE COMPANY USE Building Street Address (including Apt., Unit, Suite, and/or Bldg. No.) or P.O. Route and Box No. Policy Number: N. VENDOME AVENUE City 7IP Code Company NAIC Number: State 08402 SECTION D - SURVEYOR, ENGINEER, OR ARCHITECT CERTIFICATION (CONTINUED) Copy both sides of this Elevation Certificate for (1) community official, (2) insurance agent/company, and (3) building owner. 4 VENTS ARE SMART VENTS RATED AT VENT IS CRAWL SPACE DOOR SYSTEMS FLOOD VENT RATED AT ITEM CZE IS THE A.C. PAD. Signature Date SECTION E - BUILDING ELEVATION INFORMATION (SURVEY NOT REQUIRED) FOR ZONE AO AND ZONE A (WITHOUT BFE) For Zones AO and A (without BFE), complete Items E1-E5. If the Certificate is intended to support a LOMA or LOMR-F request, complete Sections A, B, and C. For Items E1-E4, use natural grade, if available. Check the measurement used. In Puerto Rico only, enter meters. E1. Provide elevation information for the following and check the appropriate boxes to show whether the elevation is above or below the highest adjacent grade (HAG) and the lowest adjacent grade (LAG). a) Top of bottom floor (including basement, crawlspace, or enclosure) is ☐ feet ☐ meters above or below the HAG. b) Top of bottom floor (including basement, crawlspace, or enclosure) is above or below the LAG. ☐ feet ☐ meters E2. For Building Diagrams 6-9 with permanent flood openings provided in Section A Items 8 and/or 9 (see pages 8-9 of Instructions) the next higher floor (elevation C2.b in the diagrams) of the building is above or ☐ feet ☐ meters Delow the HAG. above or below the HAG. E3. Attached garage (top of slab) is feet meters E4. Top of platform of machinery and/or equipment servicing the building is ☐ feet ☐ meters above or below the HAG. E5. Zone AO only: If no flood depth number is available, is the top of the bottom floor elevated in accordance with the community's floodplain management ☐ No ☐ Unknown. The local official must certify this information in Section G. SECTION F - PROPERTY OWNER (OR OWNER'S REPRESENTATIVE) CERTIFICATION . The property owner or owner's authorized representative who completes Sections A, B, and E for Zone A (without a FEMA-issued or community-issued BFE) or Zone AO must sign here. The statements in Sections A, B, and E are correct to the best of my knowledge. Property Owner or Owner's Authorized Representative's Name ZIP Code Address City State Telephone Signature. Date Comments ☐ Check here if attachments. SECTION G - COMMUNITY INFORMATION (OPTIONAL) The local official who is authorized by law or ordinance to administer the community's floodplain management ordinance can complete Sections A, B, C (or E), and G of this Elevation Certificate. Complete the applicable item(s) and sign below. Check the measurement used in Items G8-G10. In Puerto Rico only, enter meters. G1. The information in Section C was taken from other documentation that has been signed and sealed by a licensed surveyor, engineer, or architect who is authorized by law to certify elevation information. (Indicate the source and date of the elevation data in the Comments area below.) G2. A community official completed Section E for a building located in Zone A (without a FEMA-issued or community-issued BFE) or Zone AO. G3. The following information (Items G4-G9) is provided for community floodplain management purposes. G6. Date Certificate Of Compliance/Occupancy Issued G4. Permit Number G5. Date Permit Issued

☐ New Construction G7. This permit has been issued for: ☐ Substantial Improvement G8. Elevation of as-built lowest floor (including basement) of the building: ☐ feet ☐ meters Datum ☐ meters G9. BFE or (in Zone A0) depth of flooding at the building site: | feet Datum ☐ feet ☐ meters G10. Community's design flood elevation: Datum Local Official's Name Title CFM JIM GALANTINO Community Name Telephone 609-822-1974 **MARGATE** Signature Date

☐ Check here if attachments.

Comments

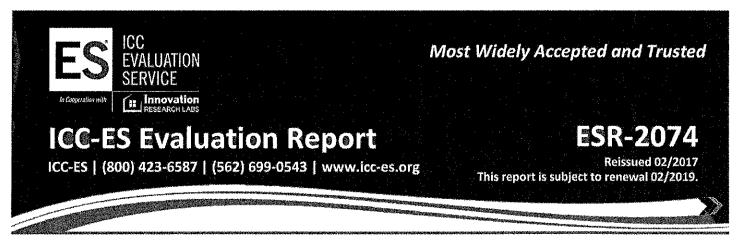

DIVISION: 08 00 00—OPENINGS

SECTION: 08 95 43—VENTS/FOUNDATION FLOOD VENTS

REPORT HOLDER:

SMARTVENT PRODUCTS, INC.

430 ANDBRO DRIVE, UNIT 1 PITMAN, NEW JERSEY 08071

EVALUATION SUBJECT:

SMART VENT® AUTOMATIC FOUNDATION FLOOD VENTS: MODELS #1540-520; #1540-521; #1540-510; #1540-511; #1540-570; #1540-574; #1540-524; #1540-514



Look for the trusted marks of Conformity!

"2014 Recipient of Prestigious Western States Seismic Policy Council (WSSPC) Award in Excellence"





ICC-ES Evaluation Reports are not to be construed as representing aesthetics or any other attributes not specifically addressed, nor are they to be construed as an endorsement of the subject of the report or a recommendation for its use. There is no warranty by ICC Evaluation Service, LLC, express or implied, as to any finding or other matter in this report, or as to any product covered by the report.



ICC-ES Evaluation Report

ESR-2074

Reissued February 2017 Revised November 2017

This report is subject to renewal February 2019.

www.icc-es.org | (800) 423-6587 | (562) 699-0543

A Subsidiary of the International Code Council®

DIVISION: 08 00 00—OPENINGS

Section: 08 95 43—Vents/Foundation Flood Vents

REPORT HOLDER:

SMARTVENT PRODUCTS, INC. 430 ANDBRO DRIVE, UNIT 1 PITMAN, NEW JERSEY 08071 (877) 441-8368 www.smartvent.com info@smartvent.com

EVALUATION SUBJECT:

SMART VENT® AUTOMATIC FOUNDATION FLOOD VENTS: MODELS #1540-520; #1540-521; #1540-510; #1540-511; #1540-570; #1540-574; #1540-524; #1540-514

1.0 EVALUATION SCOPE

Compliance with the following codes:

- 2015, 2012, 2009 and 2006 International Building Code® (IBC)
- 2015, 2012, 2009 and 2006 International Residential Code® (IRC)
- 2013 Abu Dhabi International Building Code (ADIBC)[†]

[†]The ADIBC is based on the 2009 IBC. 2009 IBC code sections referenced in this report are the same sections in the ADIBC.

Properties evaluated:

- Physical operation
- Water flow

2.0 USES

The Smart Vent® units are engineered mechanically operated flood vents (FVs) employed to equalize hydrostatic pressure on walls of enclosures subject to rising or falling flood waters. Certain models also allow natural ventilation.

3.0 DESCRIPTION

3.1 General:

When subjected to rising water, the Smart Vent[®] FVs internal floats are activated, then pivot open to allow flow in either direction to equalize water level and hydrostatic pressure from one side of the foundation to the other. The FV pivoting door is normally held in the closed position by a buoyant release device. When subjected to rising water,

the buoyant release device causes the unit to unlatch, allowing the door to rotate out of the way and allow flow. The water level stabilizes, equalizing the lateral forces. Each unit is fabricated from stainless steel. Smart Vent® Automatic Foundation Flood Vents are available in various models and sizes as described in Table 1. The SmartVENT® Stacking Model #1540-511 and FloodVENT® Stacking Model #1540-521 units each contain two vertically arranged openings per unit.

3.2 Engineered Opening:

The FVs comply with the design principle noted in Section 2.7.2.2 and Section 2.7.3 of ASCE/SEI 24-14 [Section 2.6.2.2 of ASCE/SEI 24-05 (2012, 2009, 2006 IBC and IRC)] for a maximum rate of rise and fall of 5.0 feet per hour (0.423 mm/s). In order to comply with the engineered opening requirement of ASCE/SEI 24, Smart Vent FVs must be installed in accordance with Section 4.0.

3.3 Ventilation:

The SmartVENT® Model #1540-510 and SmartVENT® Overhead Door Model #1540-514 both have screen covers with ¹/₄-inch-by-¹/₄-inch (6.35 by 6.35 mm) openings, yielding 51 square inches (32 903 mm²) of net free area to supply natural ventilation. The SmartVENT® Stacking Model #1540-511 consists of two Model #1540-510 units in one assembly, and provides 102 square inches (65 806 mm²) of net free area to supply natural ventilation. Other FVs recognized in this report do not offer natural ventilation.

4.0 DESIGN AND INSTALLATION

SmartVENT® and FloodVENT® are designed to be installed into walls or overhead doors of existing or new construction from the exterior side. Installation of the vents must be in accordance with the manufacturer's instructions, the applicable code and this report. Installation clips allow mounting in masonry and concrete walls of any thickness. In order to comply with the engineered opening design principle noted in Section 2.7.2.2 and 2.7.3 of ASCE/SEI 24-14 [Section 2.6.2.2 of ASCE/SEI 24-05 (2012, 2009, 2006 IBC and IRC)], the Smart Vent® FVs must be installed as follows:

- With a minimum of two openings on different sides of each enclosed area.
- With a minimum of one FV for every 200 square feet (18.6 m²) of enclosed area, except that the SmartVENT® Stacking Model #1540-511 and FloodVENT® Stacking Model #1540-521 must be



installed with a minimum of one FV for every $400 \text{ square feet } (37.2 \text{ m}^2) \text{ of enclosed area.}$

- Below the base flood elevation.
- With the bottom of the FV located a maximum of 12 inches (305.4 mm) above the higher of the final grade or floor and finished exterior grade immediately under each opening.

5.0 CONDITIONS OF USE

The Smart Vent[®] FVs described in this report comply with, or are suitable alternatives to what is specified in, those codes listed in Section 1.0 of this report, subject to the following conditions:

5.1 The Smart Vent® FVs must be installed in accordance with this report, the applicable code and the manufacturer's installation instructions. In the event of a conflict, the instructions in this report govern. 5.2 The Smart Vent® FVs must not be used in the place of "breakaway walls" in coastal high hazard areas, but are permitted for use in conjunction with breakaway walls in other areas.

6.0 EVIDENCE SUBMITTED

Data in accordance with the ICC-ES Acceptance Criteria for Mechanically Operated Flood Vents (AC364), dated August 2015.

7.0 IDENTIFICATION

The Smart VENT® models recognized in this report must be identified by a label bearing the manufacturer's name (Smartvent Products, Inc.), the model number, and the evaluation report number (ESR-2074).

TABLE 1-MODEL SIZES

MODEL NAME	MODEL NUMBER	MODEL SIZE (in.)	COVERAGE (sq. ft.)
FloodVENT [®]	1540-520	15 ³ / ₄ " X 7 ³ / ₄ "	200
SmartVENT [®]	1540-510	15 ³ / ₄ " X 7 ³ / ₄ "	200
FloodVENT [®] Overhead Door	1540-524	15 ³ / ₄ " X 7 ³ / ₄ "	200
SmartVENT [®] Overhead Door	1540-514	15 ³ / ₄ " X 7 ³ / ₄ "	200
Wood Wall FloodVENT®	1540-570	14" X 8 ³ / ₄ "	200
Wood Wall FloodVENT® Overhead Door	1540-574	14" X 8 ³ / ₄ "	200
SmartVENT [®] Stacker	1540-511	16" X 16"	400
FloodVent [®] Stacker	1540-521	16" X 16"	400

For SI: 1 inch = 25.4 mm; 1 square foot = m²

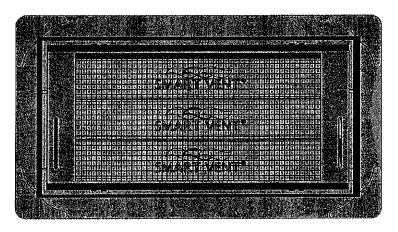


FIGURE 1—SMART VENT: MODEL 1540-510

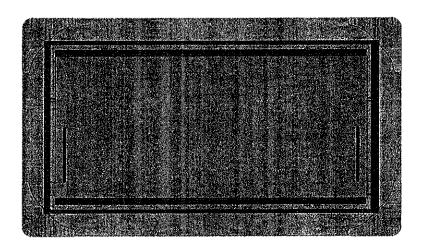


FIGURE 2—SMART VENT MODEL 1540-520

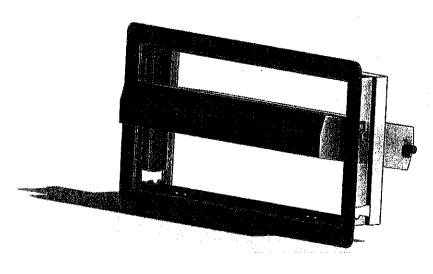


FIGURE 3—SMART VENT: SHOWN WITH FLOOD DOOR PIVOTED OPEN

Certification of Engineered Flood Openings

In accordance with the Code of Federal Regulations for the National Flood Insurance Program

I hereby certify that the Crawl Space Door Systems flood vents 816CS, 1220CS, 1232CS, 1616CS, 1624CS, 1632CS, 2032CS, 2424CS, and 2436CS are designed are designed in accordance with the requirements of the Code of Federal Regulations for the National Flood Insurance Program (NFIP) to provide automatic equalization of hydrostatic flood forces by allowing for the entry and exit of floodwaters, when properly installed and sized as set forth below. Vent opening measurements were measured and certified by Mr. Christopher Mark Loney, Virginia P.E. NO. 029000. Detailed calculations were prepared as outlined in "Review of certification of Engineered Flood Openings," prepared by Dr. Georg Reichard, Associate Professor of Building Construction, Virginia Tech (available upon request from Crawl Space Door Systems, Inc. billy@crawlspacedoors.com)

Design Characteristics

Section 2.6.2.2 of ASCE/SEI 24-05 provides an equation to determine the required net area of engineered openings (A_o) for a given enclosed area (A_e). This equation is based on the hydraulic formula for the flow rate across sharp edged orifices. I have utilized this equation to calculate 1) the restricted flow rate through the main frame opening in case the louver is blown out during a flood event; 2) the flow rate through the individual openings between louver blades; and 3) the flow rate through projected openings between louver blades following hydraulic short-tube theory. The maximum total enclosed area (A_e) that can be serviced by a single vent has then been determined by utilizing the lowest flow rate of the three assessed scenarios for each vent and is listed in Table 1. These values are based on the following assumptions:

- In absence of reliable data, the rates of rise and fall have been assumed at a minimum rate of 5 feet/hour;
- The (maximum) difference between the exterior and interior floodwater levels shall not exceed 1 foot during base flood conditions;
- A factor of safety of 5 has been assumed, which is consistent with design practices related to protection of life and property;
- The net area of openings (A_o) as provided by the manufacturer.

*)	Model	HxW	A _a	A _e
	,,,,,,,,,,	[in]	[in²]	[ft ²]
	816CS	8 x 16	105	205
	1220CS	12 x 20	235	500
	1232CS	12 x 32	305	645
	1616CS	16 x 16	180	395
	1624CS	16 x 24	310	670
O	1632CS	16 x 32	405	835
	2032CS	20 x 32	630	1240
口	2424CS	24 x 24	570	1230
旦	2436CS	24 x 36	850	1765

Table 1 Maximum total enclosed area (A_e) that can be serviced by each individual model based on the given net area of engineered openings (A_o)

Installation Requirements and Limitations

This certification will be voided if the following installation requirements and limitations are not enforced:

- There shall be a minimum of two openings on different sides of each enclosed area subject to flooding;
- The bottom of all openings shall be no higher than one foot given net are above the higher of the interior or exterior grade that is immediately under each opening;
- No temporary (e.g. during cold weather) or permanent solid cover may be placed into or over the flood vent that would block
 Where data or analyses indicate many many largers.
- Where data or analyses indicate more rapid rates of rise and fall, the required number of openings shall be increased to account for those different conditions. The number or size of the openings may be decreased if data or analyses indicate rates of rise and fall are less than 5 feet per hour.

Certifying Design Professional		-
Name WILLIAM S. SWIDERSKI, P.E.	Title ENGINEER	
Company SWIDERSKI ASSSOCIATES		3/4
Address 599 SHORE ROAD SOMERS POINT, NJ		
License PROFESSIONAL ENGINEER	License No. 24GE02048200	
Signature: MM (1)	Date:	
dentification of the Building and Installed Flo	ood Vents (Ry Others)	
he flood vent models marked in Table 1*) are being installed	at the following building:	

Spring 2012

Building Address